



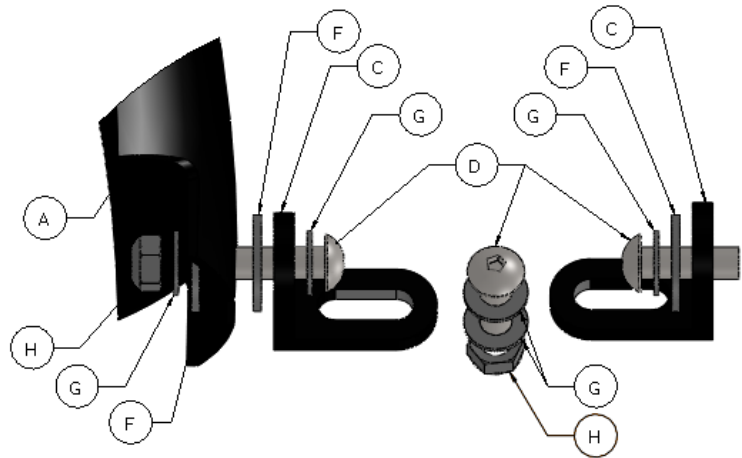

Big Cat HPV, LLC  
2016 Stanhome Way  
Orlando, FL 32804

## Rear Fender Set 20" & 26"

PART NUMBER	PART NAME	QTY	COMMENTS
A	REAR FENDER	1	
B	WIRE FENDER STAYS	4	
C	REAR FENDER BRACKET	2	
D	M5 BUTTON HEAD BOLT	3	16mm LONG BUTTON HEAD SCREW
E	M5x16 SHCS	2	16mm LONG SOCKET HEAD SCREW
F	RUBBER WASHER	3	
G	M5 WASHER	7	
H	M5 HEX NUT	2	

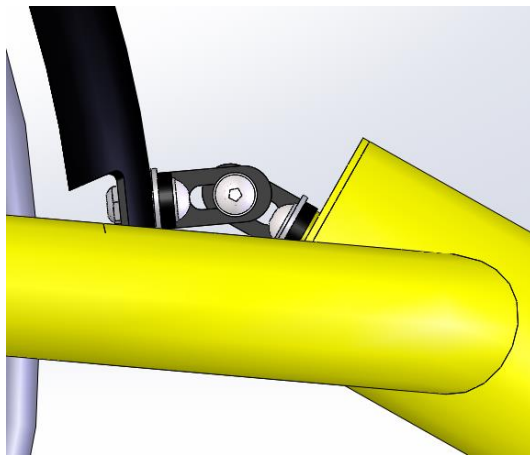

1. Assemble one rear fender bracket to the end of the mainframe as shown. (Parts C,D,F,G)
2. Assemble the second rear fender bracket to the rear fender as shown. (Parts A,C,D,F,G,H)
3. Using the M5X16 SHCS and M5 washers, bolt the 4 long wire fender stays provided with the fender into the threaded holes at the top of the drop outs. (Parts B,E,G)
4. Attach the fender stay clips to the fender and tighten the screws.
5. Insert fasteners to attach the two rear fender brackets to each other. (Parts D,G,H)

