



ASSIST BAR ASSEMBLY

ALL MODELS

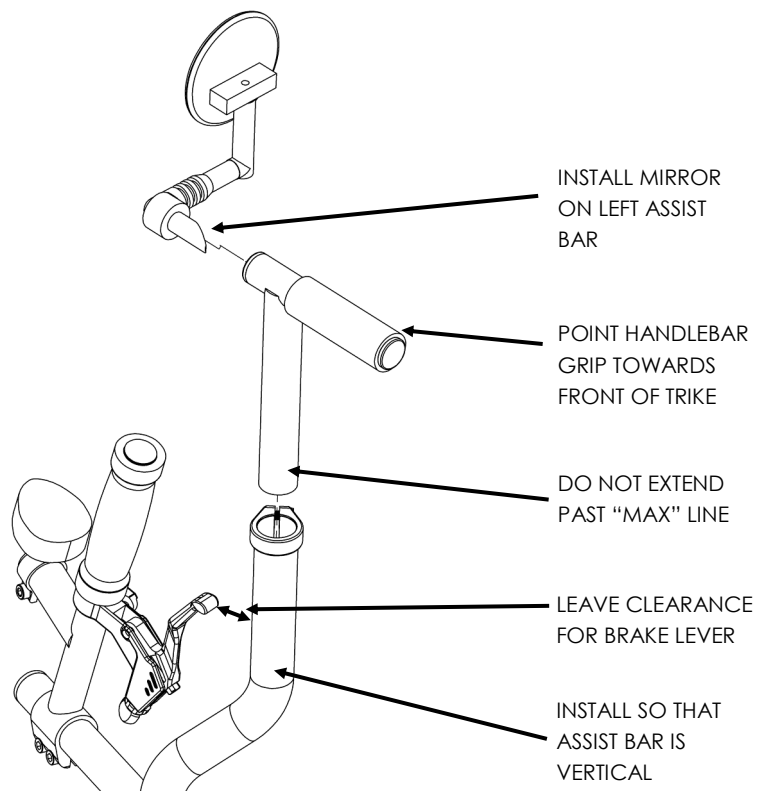

THRU-AXLE REAR DERAILLEUR ASSEMBLY

5.5.9, 700, DUMONT, EXPEDITION & MAX

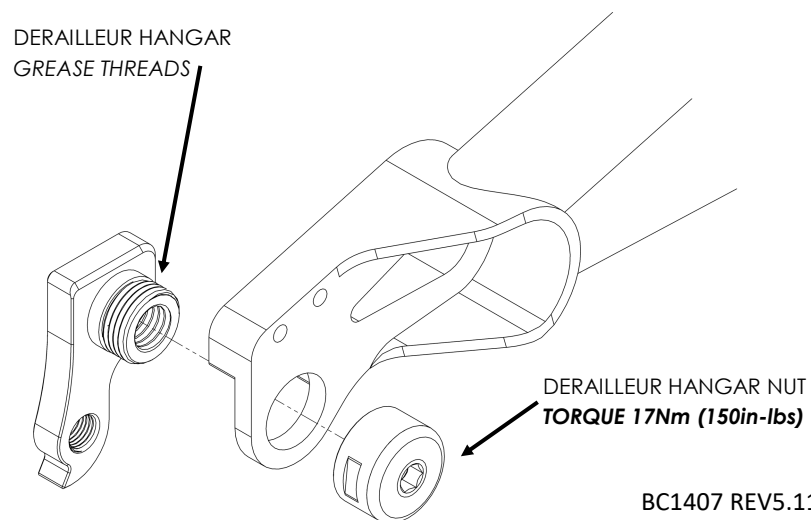

Mechanic Reference Installation Manual



Orlando, Florida

For owner's manual and technical information visit:

Catrike.com/assembly




TABLE OF CONTENTS

Tie Rod Assembly	2
Headset Assembly	3
Boom Insertion	3
Folding Kickstand Assembly	4
Rear Parking Brake Assembly	4
Chain Tube Routing	5
Suspended Spindle Assembly	6
Floating Idler Pulley Assembly	6
Rear Swingarm Assembly	7
Assist Bar Assembly	8
Thru-Axle Rear Derailleur Assembly	8

TIE ROD ASSEMBLY


5.5.9

MAX

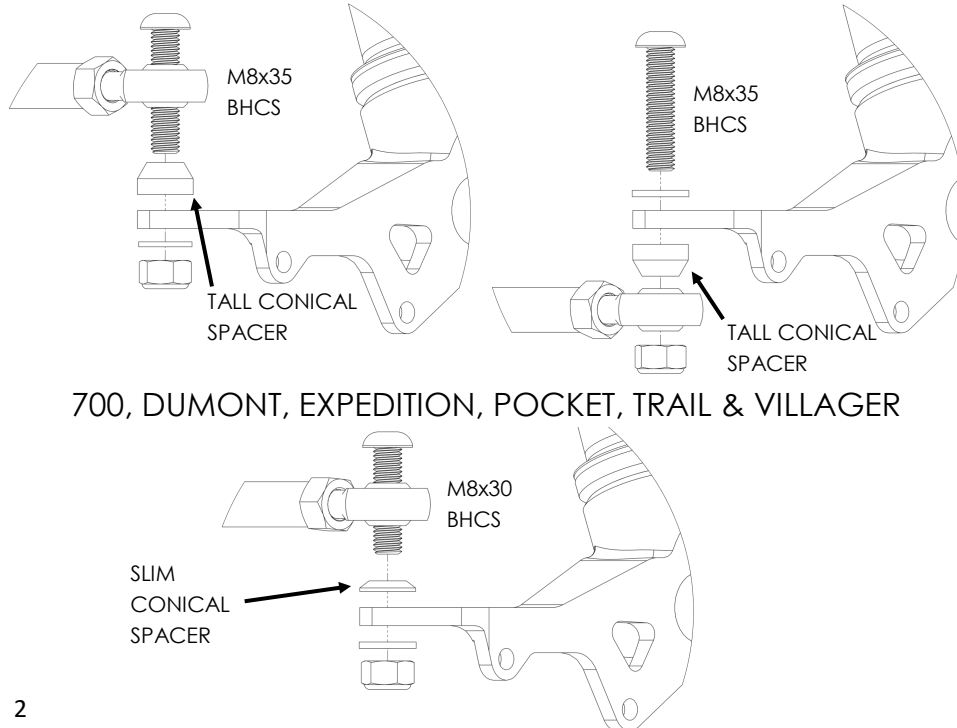


FLOATING IDLER PULLEY ASSEMBLY

DUMONT

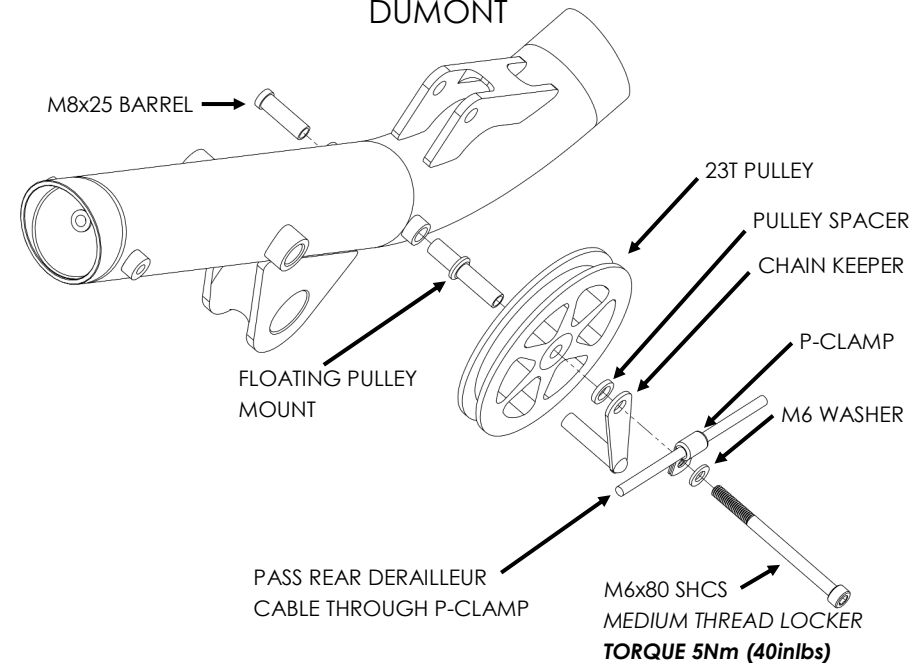

CELLASTO INFORMATION & INSTALLATION

DUMONT

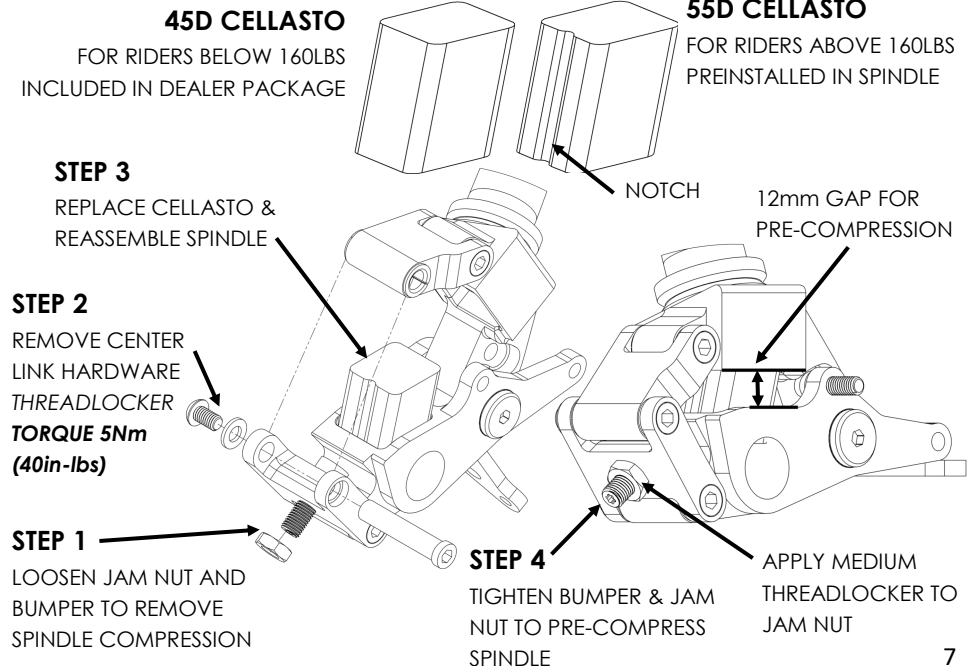


REAR SWINGARM ASSEMBLY

DUMONT

STEP 1


INSTALL BEARING SPACERS INTO
SUSPENSION YOKE

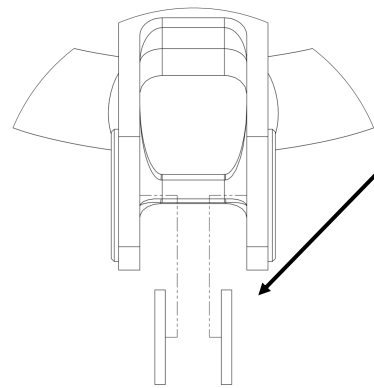

STEP 2

INSTALL YOKE ON FRAME

25mm PIVOT AXLE NUT
GREASE THREADS
TORQUE 30Nm (256in-lbs)

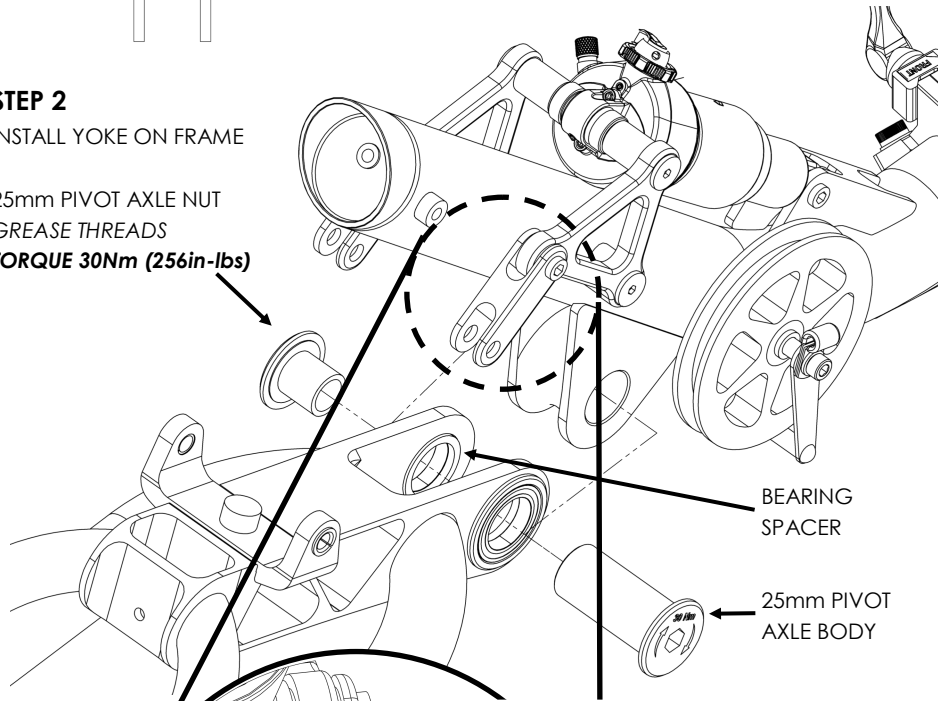

BEARING
SPACER

25mm PIVOT
AXLE BODY

STEP 3

INSTALL BOTH SHOCK LINKAGES

M6x10 BHCS
TORQUE 5Nm (40in-lbs)


8mm NORGLIDE
WASHER

M8x16 THREADED
BARREL

8mm NORGLIDE
BEARING

HEADSET ASSEMBLY

ALL MODELS

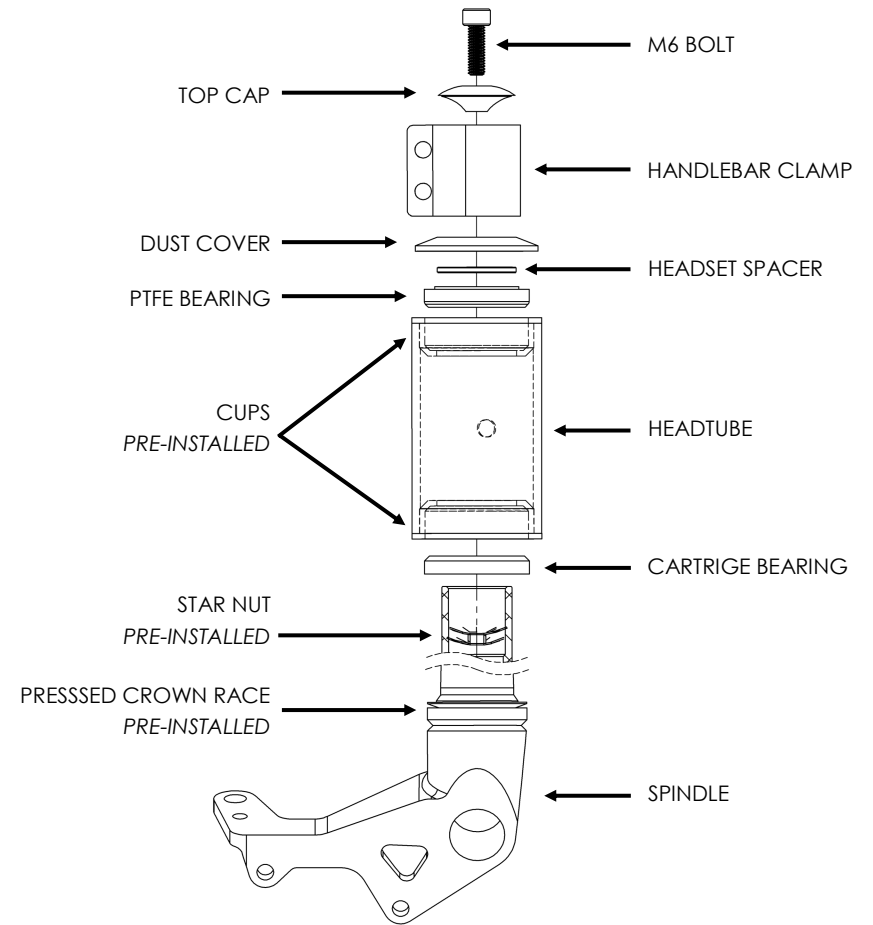

M6 BOLT

TOP CAP

HANDLEBAR CLAMP

DUST COVER

HEADSET SPACER

PTFE BEARING

CUPS

PRE-INSTALLED

HEADTUBE

CARTRIDGE BEARING

STAR NUT


PRE-INSTALLED

PRESSED CROWN RACE
PRE-INSTALLED

SPINDLE

BOOM INSERTION


ALL MODELS

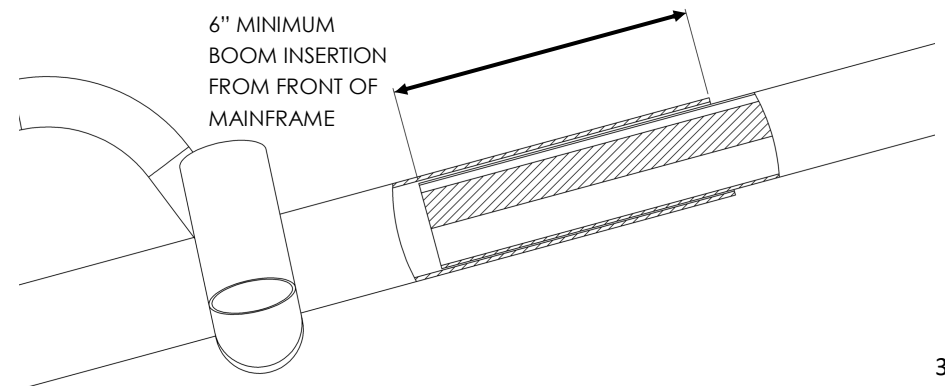

6" MINIMUM
BOOM INSERTION
FROM FRONT OF
MAINFRAME

FOLDING KICKSTAND ASSEMBLY


5.5.9, DUMONT & TRAIL

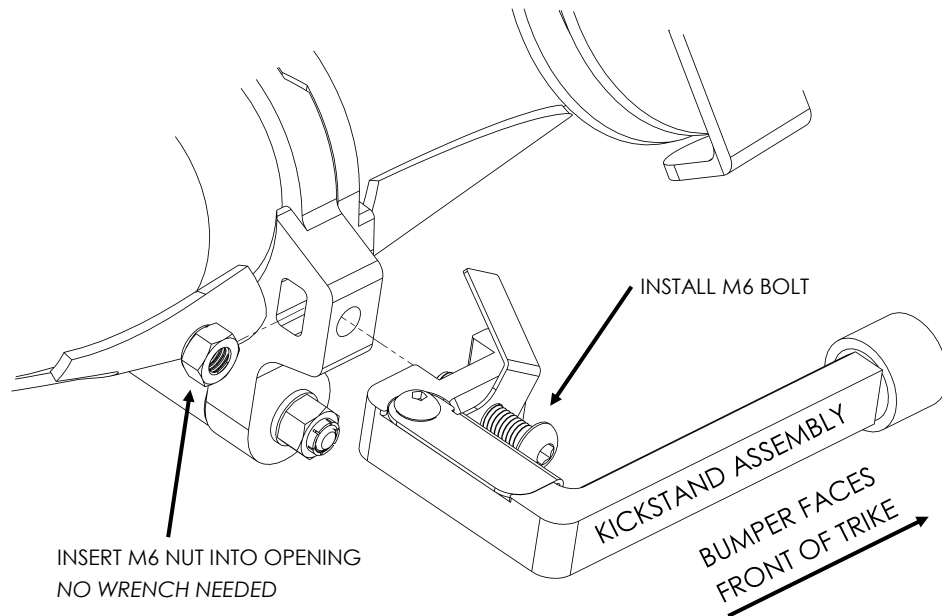

REAR PARKING BRAKE ASSEMBLY


700

FOR REAR BRAKE
ADJUSTMENT GO TO:
SRAM.COM/SERVICE

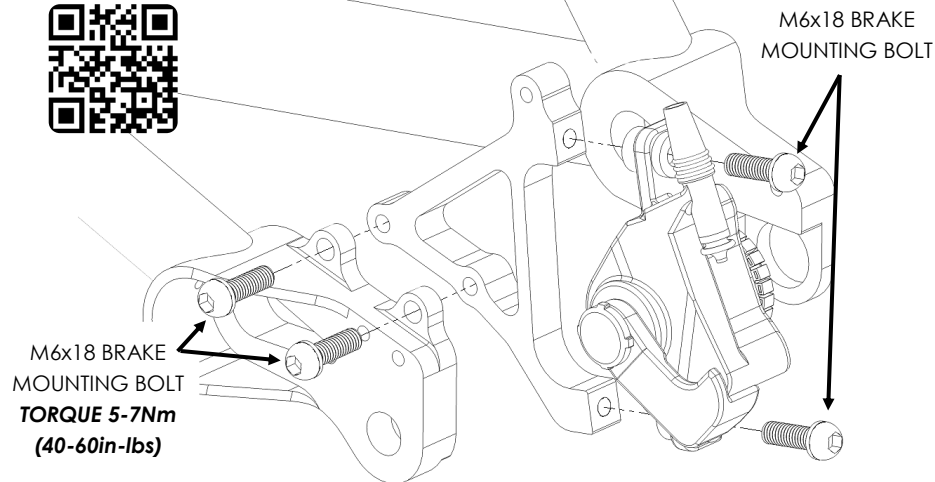


CHAIN TUBE ROUTING

5.5.9, 700, DUMONT, EXPEDITION, POCKET, TRAIL

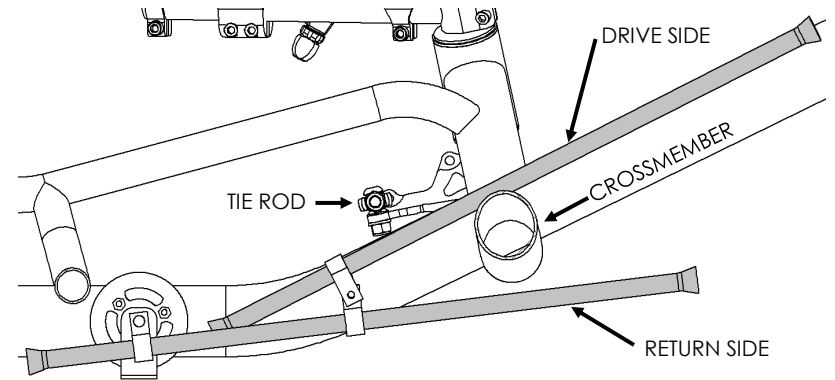

VILLAGER

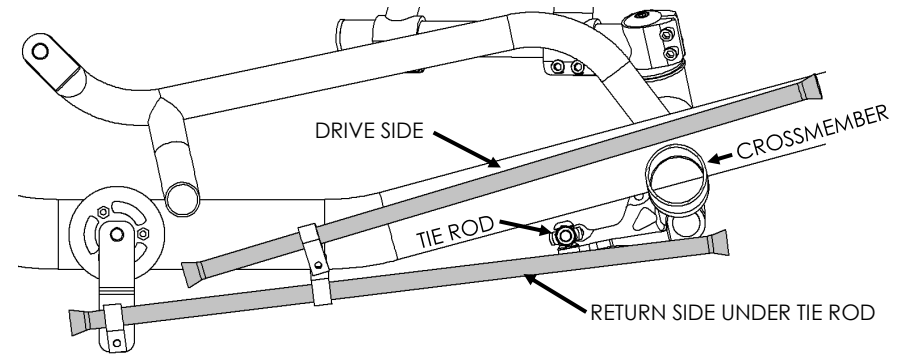

MAX

